


TREE PLANTING DETAIL


Dig Planting hole 6' wide
set trees 2 inches high

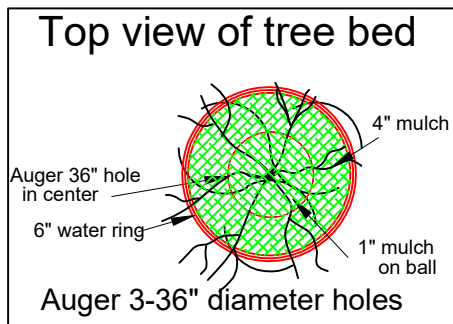

Thin damaged-dead limbs.
Do not cut leader

For each tree, mix soil with:
2 bags of Black Wonder 5000 Soil Builder,
lime if needed, 1# slow release fertilizer.
Blackwonder5000.com

Remove synthetic "burlap" and strapping

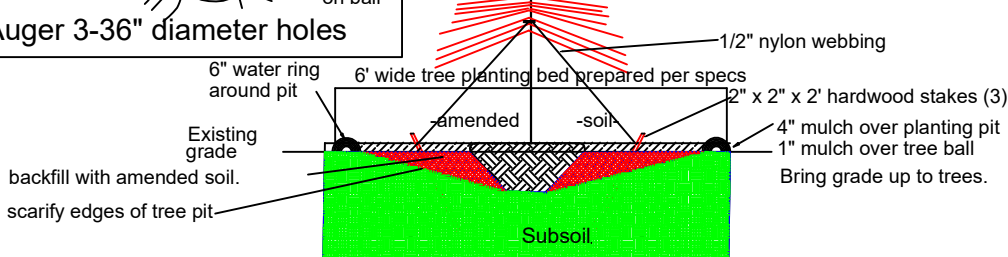

Prepare 6' foot wide/ 18" deep mixed and amended soil per tree

TREE PLANTING DETAIL

Planting Trees with Black Wonder 5000 Soil Builder

1. Contact ULOCO for underground utility location.
Contact General Contractor for site utilities.
2. Fine grade all areas for proper drainage per Grading plan.
Subsoil tree planting area 12" deep. Remove all stones and debris.
3. Flag tree locations.
4. Spread 2 bags Black Wonder 5000 soil builder, lime if needed, 1# fertilizer per tree planting bed.
5. Dig tree beds 6" feet wide, thoroughly mixing soil, Black Wonder, fertilizer, and lime.
6. Set trees 2" inches high. Backfill with planting mix. Soak thoroughly.
7. Mulch tree planting pit 4" deep.
8. Build 6' feet diameter-6" high edged mulch rings. Soak tree again.